To avoid problems, we ask your attention for the following points:

## 1. Check before installing

. All oil seals for leaks. Refresh in case of doubt.

## 2. Additional points for attention:

- . Oil plugs: Provide filler, level and drain plugs with new sealing rings.
- . Oil filling: Always follow the dealer specification for viscosity, filling quantities and filling procedure.
- . Check: Check the oil level again after the test drive and check for any leaks.
- . Follow (de) assembly instructions according to factory data (tightening torques etc)

## 3.Other:

- . Oil seals and any supplied thrust bearings are not covered by the warranty.
- . Old gearbox returned to Maresia Parts. (unless otherwise agreed)
- . Annouce your return request for the old gearbox by e-mail (mention invoice number and address)
- . If you have any questions, please contact our sales department.

The above information is only intended as advice to our customers. No rights can be derived from the information. Manufacturer's instructions always take precedence.